# RM 6170

## 7U 17” Rack Mount LCD Monitor
## User’s Manual

**Rev 1.0**

Downloaded from www.Manualslib.com manuals search engine

# Packing List

The complete RM 6170 package consist of:

- Rack mount 17” TFT LCD display x 1
- 6' VGA cable (male to male) x 1
- Auto switch power adapter x 1
- User manual x 1
- AC Power cord x 1

Check to make sure that the unit was not damaged in shipping. If you encounter a problem, contact your dealer.

Please read this manual thoroughly, and follow the installation and operation procedures carefully to prevent any damage to the product, and/or any of the devices that connect to it.



Downloaded from www.Manualslib.com manuals search engine

## Safety Instructions

1. Please read these safety instructions carefully.
2. Please keep this User's Manual for later reference.
3. Please disconnect this equipment from AC outlet before cleaning. Don't use liquid or sprayed detergent for cleaning. Use moisture sheet or clothe for cleaning.
4. For pluggable equipment, the socked-outlet shall be installed near the equipment and shall be easily accessible.
5. Please keep this equipment from humidity.
6. Lay this equipment on a reliable surface when install. A drop or fall could cause injury.
7. Do not leave this equipment in an environment unconditioned, storage temperature above $60^0$ C, it may damage the equipment.
8. The opening on the enclosure is for air convection hence the equipment from overheating. DO NOT COVER THE OPENING.
9. Make sure the voltage of the power source connect the equipment to the power outlet.
10. Please keep the power cord such a way that people can not step on it. Do not place anything over power cord. The power cord must rate for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and the current rating marked on the product.
11. All cautions and warning on the equipment should be noted.
12. If the equipment is not in use for long time, disconnect the equipment from mains to avoid being damaged by transient over-voltage.
13. Never pour any liquid into ventilation openings; this could cause fire or electrical shock.
14. Never open the equipment. For safety reason, qualified service personnel should only open the equipment.
15. If one of the following situations arises, get the equipment checked by service personnel.
    - The Power Cord or plug is damaged.
    - Liquid has penetrated into the equipment.
    - The equipment has been exposed to moisture.
    - The equipment has not worked well or you can not get it work according to User's Manual. The equipment has dropped and damaged.
    - If the equipment has obvious signs or breakage.



Downloaded from www.Manualslib.com manuals search engine

# Index of Contents

Packing List ..... 2
Safety Instructions ..... 3
Index of Contents ..... 4
1. General Information ..... 5
   1.1 Overview ..... 5
   1.2 Product Specification ..... 6
2. Rack Mount Installation ..... 7
3. OSD Menu ..... 8
   3.1 OSD Menu Membrane Switch ..... 8
   3.2 On Screen Display Menu ..... 9
4. Connecttion Diagram ..... 11
   4.1 Video Connection Diagram ..... 11
   4.2 Touch Screen Connection Diagram ..... 12
5. Touch Screen Specification ..... 13
6. DC Input power Supply (option) ..... 14
7. Trouble shooting ..... 15



Downloaded from www.Manualslib.com manuals search engine

# 1. General Information

## 1.1 Overview

The RM 6170 is a 7U rack mount LCD monitor with 17” 1280 x 1024 TFT LCD monitor and rugged metal black color front bezel. This monitor comes with a standard 15-pin VGA video input and front access OSD membrane switch. Optional Video-input for S-video / BNC / RCA connector and USB or PS/2 type resistive-type touch. RM 6170 comes with an external 110/220VAC power adapter, 12/24/48 VDC power input is available for customer’s application.




1. 17” 1280 x 1204 TFT LCD monitor
2. Membrane OSD Menu switch
3. External 110/220VAC power adapter with bracket



Downloaded from www.Manualslib.com manuals search engine

## 1.2 Product Specification
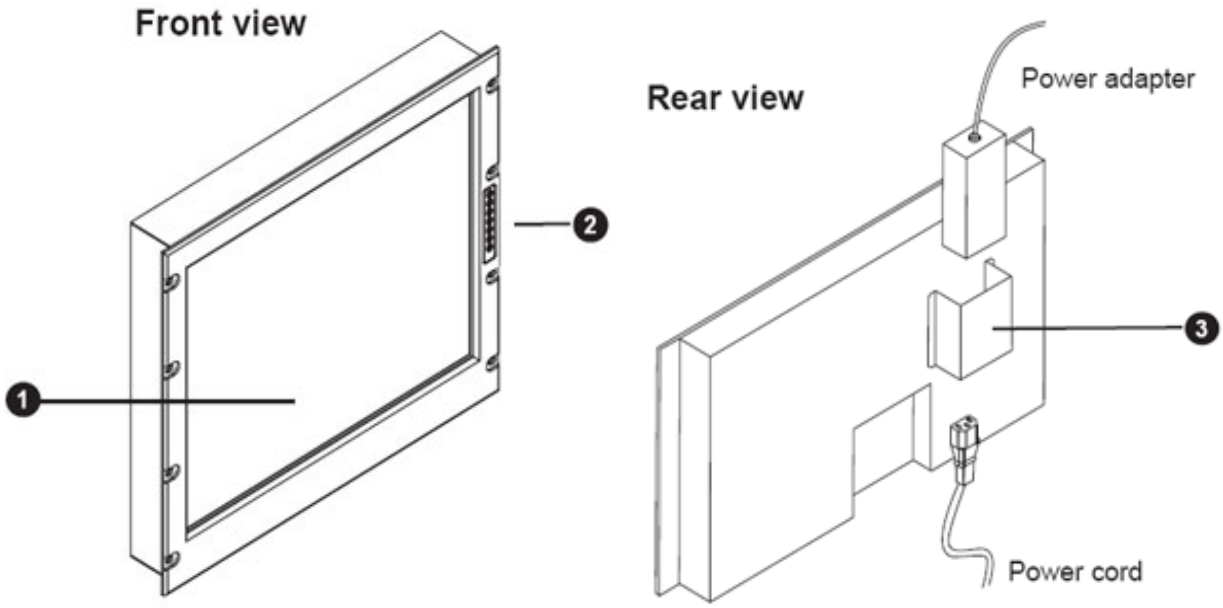
| | |
|---|---|
| Model name | RM 6170 |
| Dimension | 480 x 57 x 312mm/18.9 x 2.2" x 12.25inches |
| Net Weight | 7 Kg / 15 lbs |
| Display Size | 17 inches |
| Panel Type | Active Matrix TFT LCD |
| Resolution Capabilities | Maximum Resolution up to 1280 x 1024 |
| Viewing Angle (CR>10) | Right-Left view 150°(Typ)<br>Up-Down View 135°(Typ) |
| Contrast Ratio | 700:1 |
| Brightness | White 300 cd/m² (Center 1 point Typ) |
| Tr Response Time (ms) | 2.0 ms |
| Supported Colors | 16.7M Colors (6-bit with FRC) |
| Display Area (mm) | 337 x 270 |
| VGA Signal Input | Analog RGB, 0.7Vp-p |
| Sync. Type | Separate H/V, Composite, SOG |
| Resolution | 640 x 350, 70 Hz<br>720 x 400, 70 Hz<br>640 x 480, 60/ 72/ 75 Hz<br>800 x 600, 60/ 70/ 72/ 75 Hz<br>1024 x 768, 60/ 70/ 72/ 75 Hz<br>1152 x 864, 60/ 70/ 75 Hz<br>1280 x 1024, 60/ 70/ 75 Hz |
| Cables | 1 x 6' D-sub VGA male to male Cable |
| Plug & Play DDC | EDID 1.3 |
| Power Source | Auto-sensing 100 to 240VAC, 50 / 60Hz |
| Power Consumption | Max. 40 Watt, Standby 5 Watt |
| Temperature | Operate 0 ~ 50°C / 32 ~ 122°F<br>Storage -20 ~ 60°C / -4 ~ 140°F |
| Humidity | 10% ~ 90% RH |
| Shock Vibration | 10G acceleration (11ms duration)<br>5~500Hz 1G RMS random vibration |
| Chassis Construction | Heavy duty steel materials |
| Certification | CE / FCC, ROHs Compliance |



Downloaded from www.Manualslib.com manuals search engine

## 2. Rack mount Installation

1. Find the property position and size to screw rack mount front bezel onto the server rack mount first.
2. Lift & push the rack mount monitor into the rack cabinet, and screw between bracket and rack mount monitor with screws.





Downloaded from www.Manualslib.com manuals search engine

# 3. OSD Menu

## 3.1 OSD Menu Membrane Switch

| Membrane Switch | Function |
|---|---|
| ○ ● ● | Power light<br>Green = On<br>Orange = Power saving |
| ⊖ | Power on / off LCD |
| M | Display the OSD menu |
| ◇ ◇ ◇ ◇ | Scrolls through menu options and adjusts the displayed control |
| ↩ | Exit the OSD screen<br>Shortcut key to auto adjustment by pressed the button for 5 seconds Or<br>Toggle analog, digital & video connection (DVI-D and video options only) |

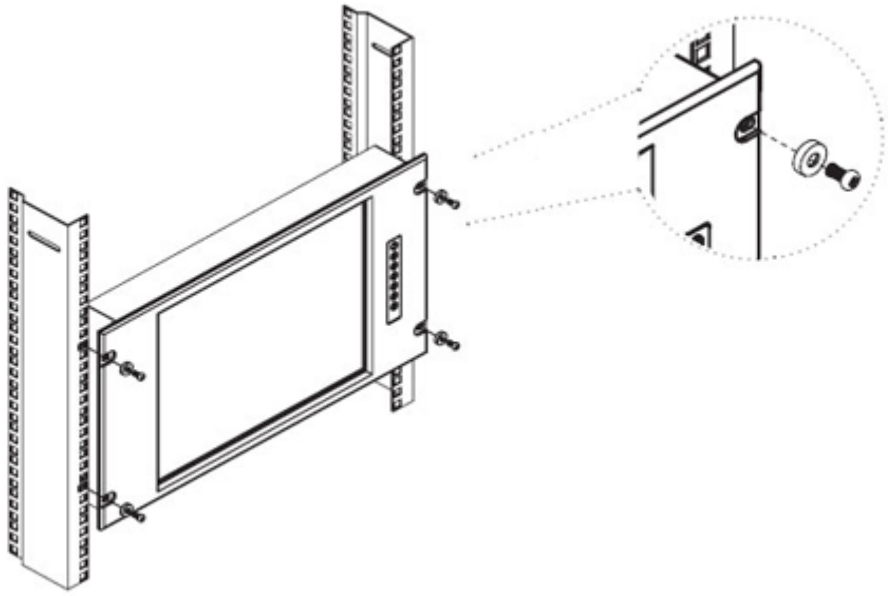

Downloaded from www.Manualslib.com manuals search engine

## 3.2 On screen Display menu




**BRIGHTNESS / CONTRAST**
Brightness: Adjust background black level of the screen image.
Contrast: Adjust the difference between the image background (black level) and the foreground (white level).

**AUTO ADJUST**
Auto Adjust: Fine tunes the video signal to eliminate waviness and distortion. A "Adjusting" message is displayed during the process.
Auto Tune: Optimize phase, clock, position and size. An "Adjusting" message is displayed during the process.

**PHASE/CLOCK**
Phase / Clock: To enter into the phase & clock sub menu

**H/V POSITION**
H/V Position: Align the screen image left or right and up or down.

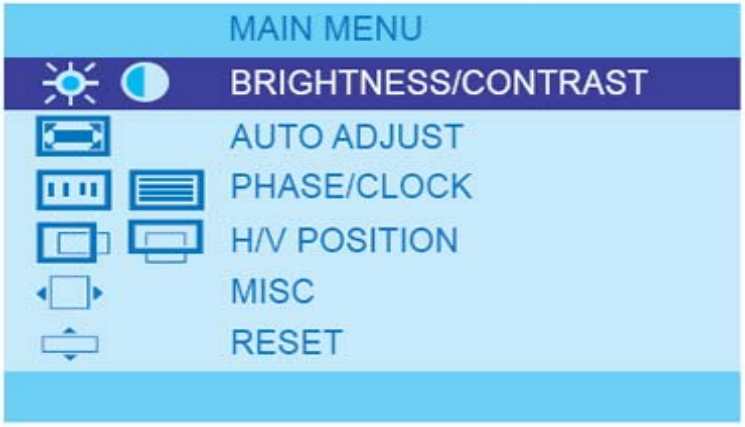**MISC**
Information: Display the current resolution, refresh rate and frequency information on the screen.

**OSD Timer**
Set the time duration in seconds that the OSD is visible after the last button is pressed. The factory default is 10 seconds.


Downloaded from www.Manualslib.com manuals search engine

**Color**
Select the screen color - 5500K, 6500K & 9500K. The factory default is 9500K.

**Language**
Select the language in which the OSD menu is displayed -

English, Chinese (中文), Japanese (日本語), German, French, Spanish, Italian

**RESET**
Restore the settings to factory defaults.


Downloaded from www.Manualslib.com manuals search engine

## 4. Connecton Diagram

The RM 6170 comes with a standard 15-pin VGA video input and external 110/220VAC power adapter.
Optional Video-input for S-video / BNC / RCA connector and USB or PS/2 type resistive-type touch.

### 4.1 Video-input Connection Diagram

15-pin D-sub VGA




15-pin D-sub VGA and DVI-D




15-pin D-sub VGA, S-video and RCA

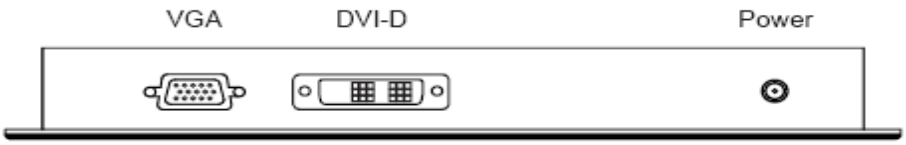


15-pin D-sub VGA, S-video and BNC

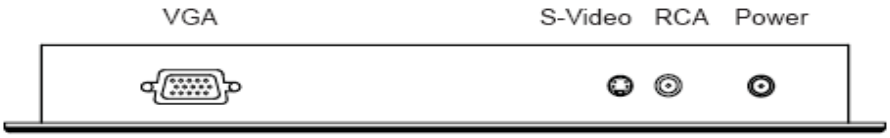

Downloaded from www.Manualslib.com manuals search engine

## 4.2 Touch Screen Connection Diagram

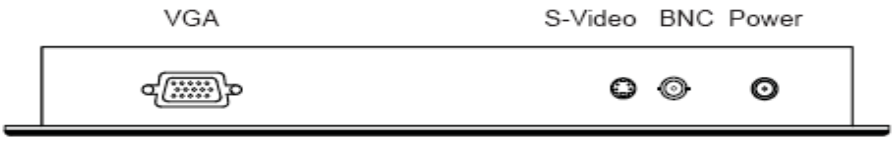


15-pin D-sub VGA and USB-type touch screen




15-pin D-sub VGA and Serial-type touch screen

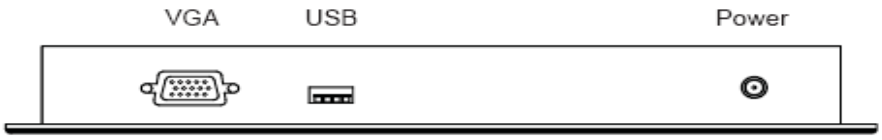

Downloaded from www.Manualslib.com manuals search engine

## 5. Touch Screen Specification
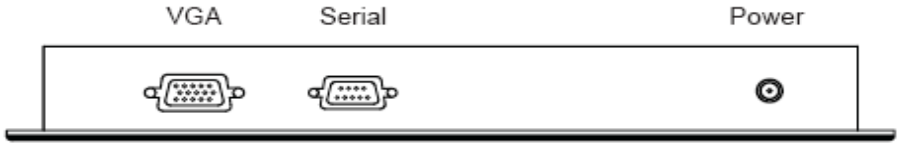
| | |
|---|---|
| Touch screen type | Resistive-type |
| Interface | USB or PS/2 |
| Optical transmittance | 82%±5% |
| Surface hardness | ≥3H (JIS K5400) |
| Operating system | Windows 98 / 2000 / ME / XP / NT / CE, DOS, Linux |

| | |
|---|---|
| Touch screen type | Capacitive-type |
| Interface | USB or PS/2 |
| Optical transmittance | 88% |
| Surface hardness | Mohs' hardness rating: 6 |
| Operating system | Windows 98 / 2000 / ME / XP / NT / CE, DOS, Linux |

**Remarks**

- USB touch screen package includes an extra 6ft USB cable, quick reference guideline and CD disc
- Serial touch screen package includes an extra 6ft serial cable, quick reference guideline and CD disc
- For detailed information, please refer to the attached CD disc
- As the touch screen unit is not made of toughened glass, please handle it carefully.



Downloaded from www.Manualslib.com manuals search engine

## 6. DC Input Power Supply (Option)




| Model | 12V | 24V | 48V |
|---|---|---|---|
| **Input rating** | | | |
| Input voltage: | 12-Volt | 24-Volt | 48-Volt |
| Input range: | 9 ~ 18V | 18 ~ 36V | 36 ~ 75V |
| Input current | | | |
| - No load | 50 mA | 50 mA | 50 mA |
| - Full load | 4950 mA | 2450 mA | 1220 mA |
| **Output rating** | | | |
| Output voltage: | 12-Volt | 12-Volt | 12-Volt |
| Output current: | 4.16A | 4.16A | 4.16A |
| **Efficiency** | 84% | 85% | 85% |



Downloaded from www.Manualslib.com manuals search engine

## 7. Trouble shooting

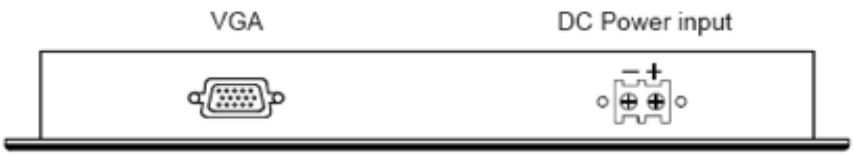1. How do I adjust the resolution?
To change monitor resolution, click Start -> Control Panel -> Display. Select Setting tab to adjust the monitor resolution in Desktop Area. The available resolutions, "640 x 480", "800 x 600", "1024 x 768", "1152 x 864", "1280 x 1024", are deter- mined by the display card in your computer.

2. Is interference signal appeared on LCD normal when shutting down the computer ?
In rare cases, interference may appear on the monitor. This may be caused by signal rate of VGA card and is considered normal. The image quality can be improved by adjusting the phase or pixel rate automatically or manually.

3. The membrane button power light is not ON
Press the power On / Off on LCD membrane button to check if the monitor is in the ON mode. Check the power cord is properly connected to the LCD keyboard drawer and power outlet.

4. Screen image is not centered or sized properly

Press the button for two seconds to automatically adjust the image. Adjust the H-position and V-position settings via On-screen menu.


Downloaded from www.Manualslib.com manuals search engine